Havis, Inc.
75 Jacksonville Road, PO Box 2099
Warminster, PA 18974
T 800-524-9900 F 215-957-0729
www.havis.com

INSTALL INSTRUCTIONS C-VS-1600-EXPL
16” VEHICLE SPECIFIC CONSOLE
2006-2010 FORD EXPLORER

TOOLS NEEDED:

Screw Driver Set
Wire Cutters
Socket set
Wire Crimping tool
Torx Bit Set

QTY	DESCRIPTION	PART #
1	Hardware kit – Torx	C-HK-1
4	¼” Flat washer	GSM31005
4	¼-20 x ¾” Hex head bolt	GSM33001
1	Duct block off plate	CM001517
1	Duct block off plate gasket	CM001518

Always!

- Read all instructions before installing any Havis, Inc. products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit

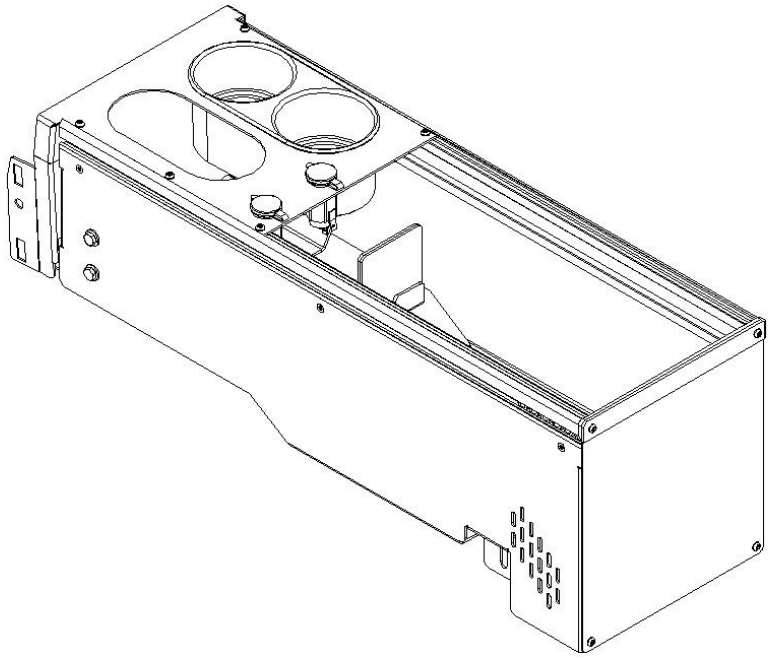

O.E.M. console
prior to removal

Carefully remove
chrome trim bezel

Remove O.E.M. cup
holder assembly. (7mm)

Unplug 12volt socket.
If vehicle has MP3 or USB ports, you must remove plugs and reconnect harness for Dash system to work correctly.

Remove O.E.M. console housing. (7mm)

A relocation plate for the MP3 and USB plugs is not currently available. It is up to the installer to locate where desired.

Remove O.E.M. console
housing. (7mm)

Remove O.E.M. console
housing. (7mm or 10mm)

Remove front side bolts,
(10mm-Driver & Pass.)

Remove rear side bolts,
(10mm-Driver & Pass.)

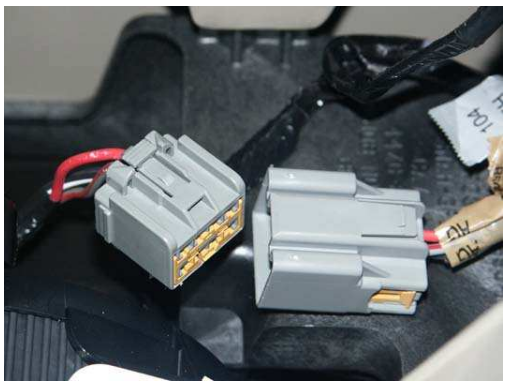

Unplug O.E.M. housing harness.

Remove side panel (Driver & Pass)

O.E.M. console completely removed

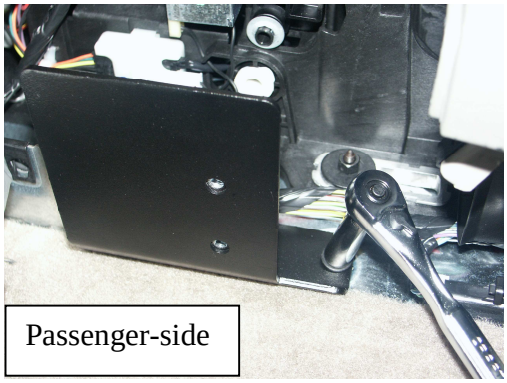

Remove one (1) floor nut on driver side and passenger side. (11mm) Attach brackets to vehicle using O.E.M. 11mm nut. Make sure brackets are pushed forward towards dash.

Install air duct block off plate and gasket using O.E.M. bolt. (11mm)

Remove (2) passenger side floor bolts and harness clip. (10mm)

Put gearshift lever into “Drive” and carefully place new console housing into position. (All floor brackets to the inside of housing)

Attach passenger side floor with O.E.M. bolts. (10mm w/ extension) Reattach harness clip.

Push front of housing down and forward while attaching to the floor brackets with supplied ¼” x ¾” hex bolts & washers. (Two each side)

Attach rear of housing to O.E.M. bracket with O.E.M. bolts. (10mm)

Attach rear of housing to O.E.M. bracket with O.E.M. bolts. (10mm)

Reattach front trim panels

Reattach chrome trim bezel.

Insert supplied cup holder.

Complete wiring and install control head(s)